


# The 3-phase Hybrid

SH5.0RT / SH6.0RT / SH8.0RT / SH10RT


**INSTALLATION & COMMISSIONING  
WITH LG | BYD BATTERY**

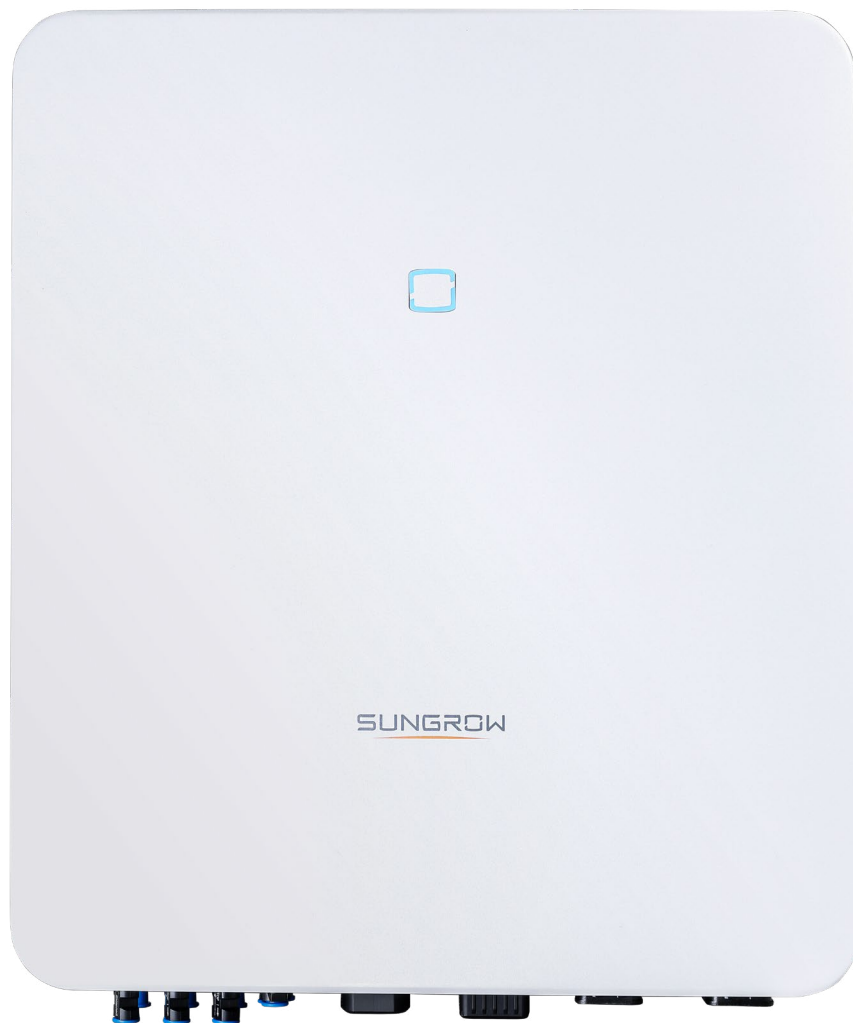




# INSTALLATION & COMMISSIONING WITH LG BATTERY


## 1 OPEN BATTERY

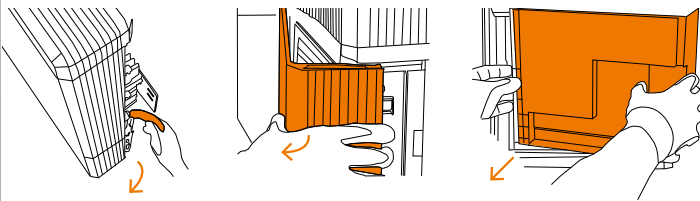


## 2 CONNECT POWER CABLES

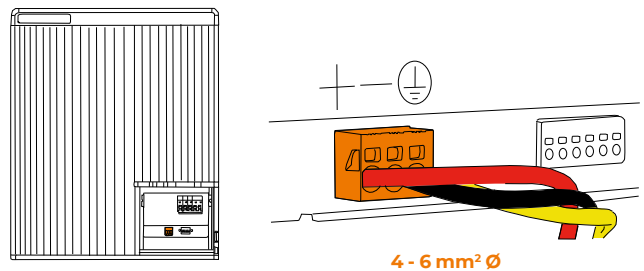


## 3 CHECK CABLE POLARITY

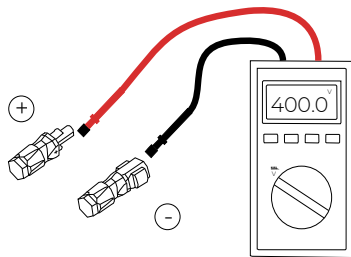


## 4 ASSEMBLE SUNCLIX CONNECTOR

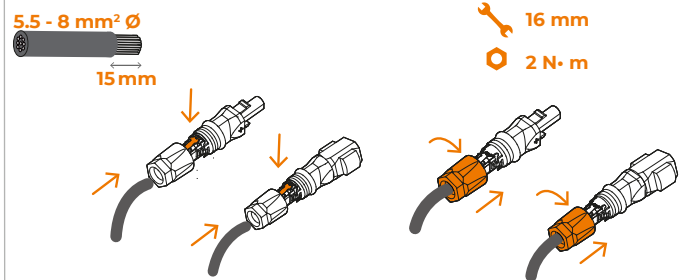


## 5 CONNECT INVERTER

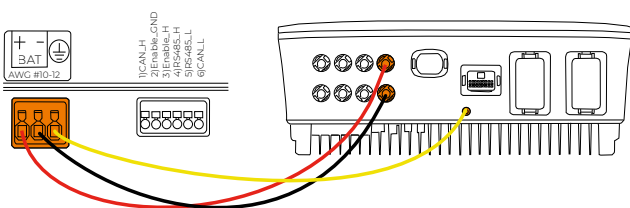


## 6 ATTACH COMMUNICATION CABLES

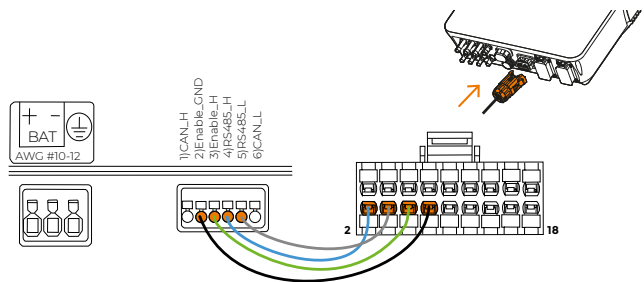

## 7 SWITCH ON BATTERY

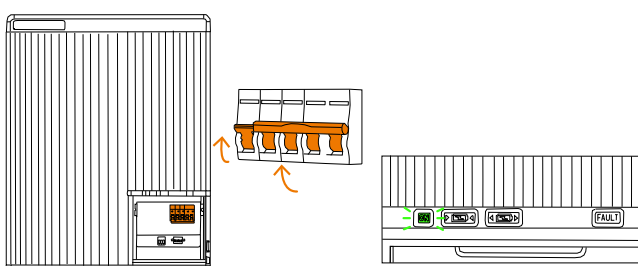


## 8 OPEN iSolarCloud

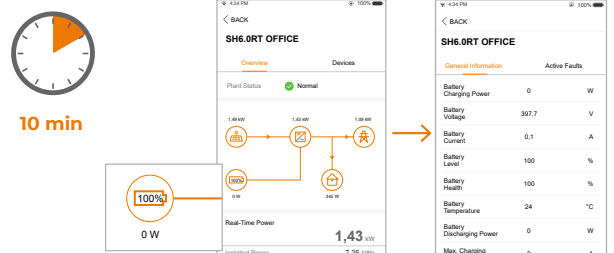




# INSTALLATION & COMMISSIONING WITH BYD BATTERY


## 1 CONNECT POWER CABLES

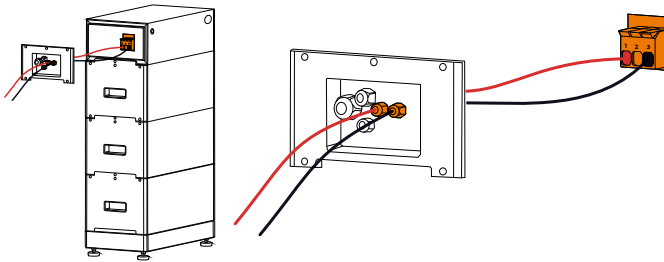


## 2 SECURE GROUNDING CONNECTION

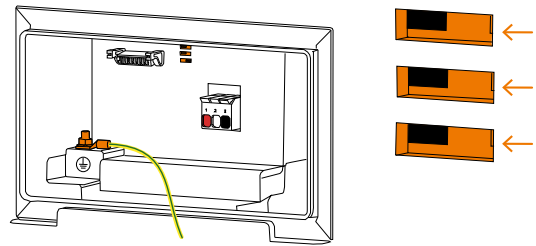


## 3 CHECK CABLE POLARITY

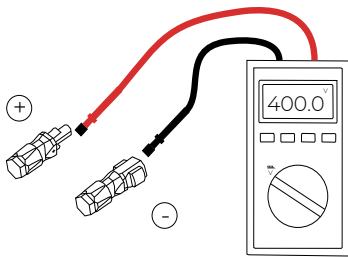


## 4 ASSEMBLE SUNCLIX CONNECTOR

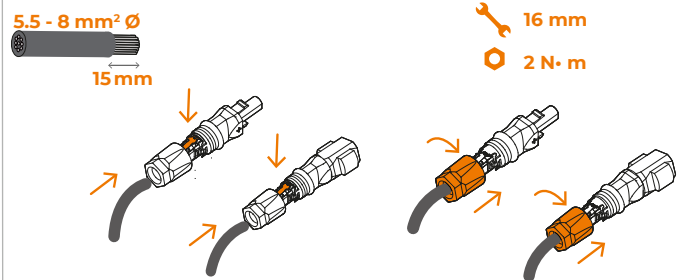


## 5 ATTACH COMMUNICATION CABLES

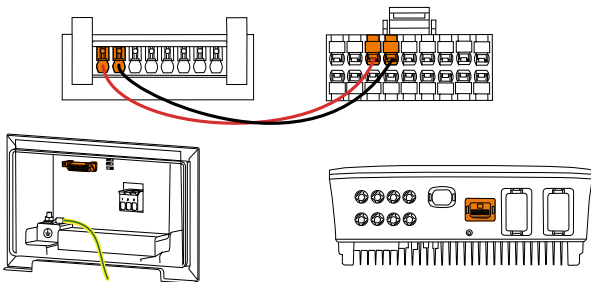

## 6 SWITCH ON BATTERY

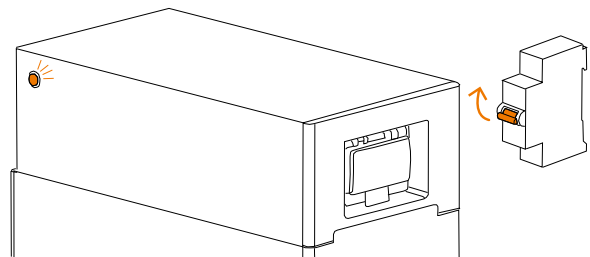

## 7 SET UP BYD Be Connect

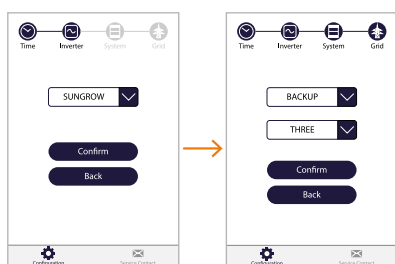

## 8 OPEN iSolarCloud

